



Rodecaster Forced Update Procedure

Before you begin this process, please make sure to temporarily disable you anti-virus software.

With your RØDECaster Pro turned off and still connected to your computer via USB, please hold down the buttons for channel numbers 2 and 4, then press the power button. Continue to hold the buttons until you see the flashing white recording light. As soon as you see this, please release the buttons.

Open the firmware updater software, a window will pop up on your screen and it will ask you which device you would like to update.

While on this screen, hold down on ALT (for windows users) or Option (for Mac users), please choose the RØDECaster Pro. Continue to hold the ALT or Option key and click on the "next" arrow at the bottom of the window to continue. On the last section, it will ask you if you like to downgrade to the latest firmware. Please click, "yes." When it starts installing, you can now release the ALT/Option button.

Your RØDECaster should then restart itself back to normal. This may take a few minutes.